

PROCEDURE FOR INSTALLING A GREENHOUSE STRATEGIES STREET LIGHT TO AN EXISTING POLE





ROUTE WIRE THROUGH SLOT AS SHOWN



GND

NEUTRAL

LOAD



**ORIENT RECEPTACLE NORTH
INDICATOR MARK TOWARD THE
NORTH BY LOOSENING TWO
SCREWS AND ROTATING
RECEPTACLE.**

ATTACH FIXTURE TO POLE




STREET LIGHT ARM

5mm HEX WRENCH

APPLY BLUE (MED) LOCTITE

TIGHTEN (2) SET SCREWS TO 145 IN-LBS

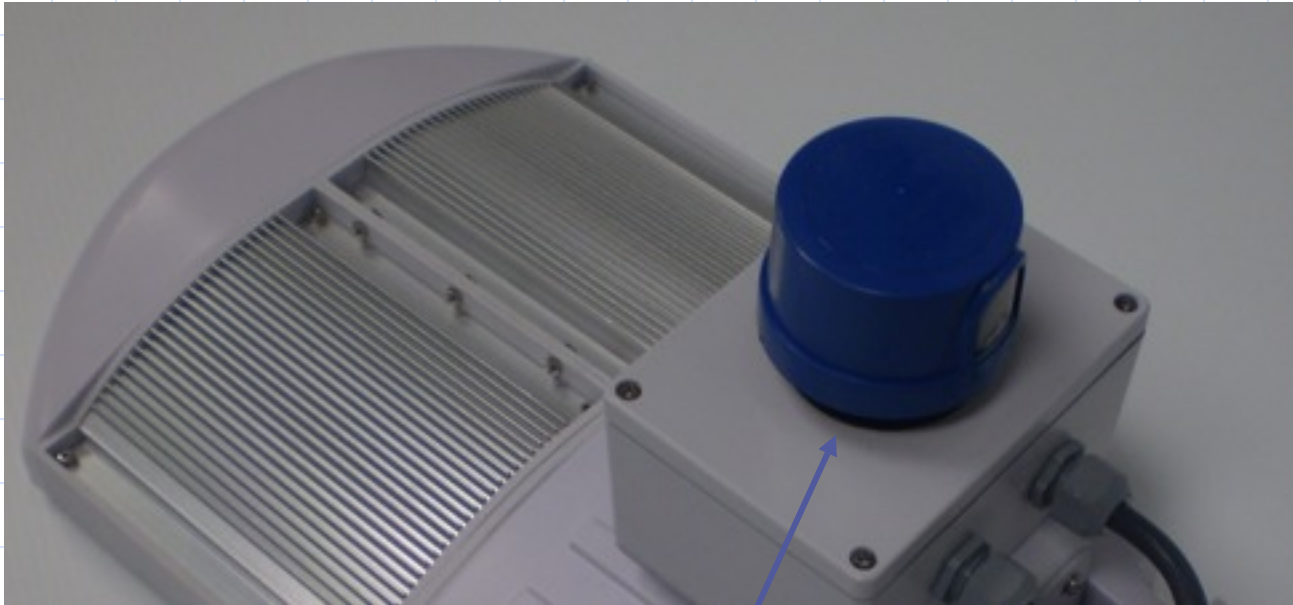

INSTALL TWIST-LOCK PHOTOCELL